

Counter Half Wall

100 cm half wall for pop-up sales tents – covers the space under your counter



Half wall on a sales tent

A fabric half wall that hangs on an adjustable bar between two tent legs. It covers the space under your sales counter and is ideal for your logo or advertising print.

Widths	2 m · 3 m · 4.5 m
Fabric height	100 cm incl. tunnel
Bar	length adjustable $\pm$ 20 cm
Leg profile	32 mm square or 45 mm hexagon (choose when ordering)
Material	polyester with PVC coating, waterproof, UV resistant


Package contents

- 1 fabric half wall with tunnel at the top
- 2 connectors for the tent legs
- 1 adjustable support bar

Installation and use

- 1 Check the leg profile**
Make sure the connectors match your tent legs: square leg = connector with hand screw (knob), 45 mm hexagon leg = bracket that wraps around the leg.
- 2 Fit the first connector**
Put the first connector on a tent leg at the required height and tighten the screw.
- 3 Thread the fabric**
Connect the bar to the first connector and slide the fabric onto the bar through the top tunnel.
- 4 Fit the second connector**
Fix the other end of the bar to the second connector and fasten it to the second leg at the same height. Adjust the bar length so the fabric is tight.
- 5 Fasten the sides**
Attach the side edges of the wall to the tent legs with the Velcro. At 110 cm height there is a 10 cm gap above the ground; at 90 cm the fabric touches the ground.

Note: The connectors fit tents of other brands only if the shape and size of the leg match. A wrong connector will not hold.

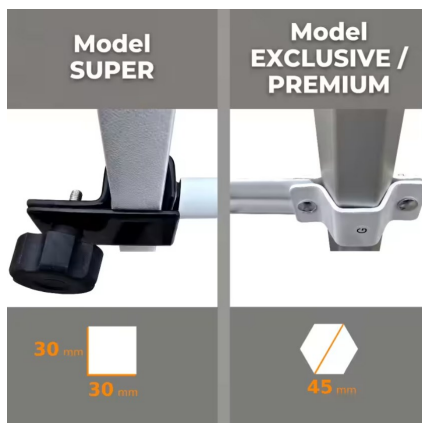

Connector types: square leg (knob) and hexagon leg

Safety instructions

For this product

- The half wall is not a counter. Do not lean on it, sit on it or hang goods on the bar.
- Tighten the connectors firmly and check them regularly.
- Remove the half wall in strong wind – it increases the wind load on the tent.

General

- Always anchor the tent properly (weights, sand or water bags, pegs or ropes) before use.
- Take the tent and its accessories down before strong wind, storm, heavy rain, snow or hail. Never leave them installed unattended or overnight in bad weather.
- Never let rain water collect on the roof or any fabric part – remove accumulated water immediately and keep all fabric fully tensioned so water runs off.
- Keep children away during installation and do not let them play with the parts.
- Check all parts before every use and replace damaged parts. Use only original BRIMO parts.

Care and storage

- Clean with water and mild soap. Let the fabric dry completely before packing.
- Black and white match the tent colour; other colours may differ slightly from the tent.

The manufacturer is not liable for damage caused by wind, rain, snow, accumulated water, insufficient anchoring or by not following these instructions.